

# Silky Touch Foundation

2073-3.14



+ Fluid foundation

+ Soft touch

+ Even complexion

Phase	Name	INCI	Supplier	%
A1	<b>EMULIUM® ILLUSTR0</b>	POLYGLYCERYL-6 POLYHYDROXYSTEARATE, POLYGLYCERYL-6 POLYRICINOLEATE	Gattefossé	<b>2.900</b>
	LEXFEEL N5	DIHEPTYL SUCCINATE, CAPRYLOYL GLYCERIN/SEBACIC ACID COPOLYMER	Inolex	9.500
	LEXFILM® SUN NATURAL	CAPRYLOYL GLYCERIN/SEBACIC ACID COPOLYMER	Inolex	2.500
	<b>ACTICIRE® MB</b>	JOJOBA ESTERS, HELIANTHUS ANNUUS (SUNFLOWER) SEED WAX, ACACIA DECURRENS FLOWER WAX, POLYGLYCERIN-3	Gattefossé	<b>2.000</b>
	PRESERVATIVE	PRESERVATIVE	-	0.700
	BENTONE GEL NGD V	NEOPENTYL GLYCOL DIHEPTANOATE, DISTEARDIMONIUM HECTORITE, PROPYLENE CARBONATE	Elementis	3.000
	LEXFEEL NATURAL	HEPTYL UNDECYLENATE	Inolex	1.500
	A2	LEXFEEL NATURAL	HEPTYL UNDECYLENATE	Inolex
NAI-TAO-77891		TITANIUM DIOXIDE, DISODIUM STEAROYL GLUTAMATE, ALUMINUM HYDROXIDE	Miyoshi	10.530
NAI-C339001-10		IRON OXIDES, DISODIUM STEAROYL GLUTAMATE, ALUMINUM HYDROXIDE	Miyoshi	2.200
NAI-C338001-10		IRON OXIDES, DISODIUM STEAROYL GLUTAMATE, ALUMINUM HYDROXIDE	Miyoshi	0.410
NAI-C337001-10		IRON OXIDES, DISODIUM STEAROYL GLUTAMATE, ALUMINUM HYDROXIDE	Miyoshi	0.158
RONAFLAIR® B-50		BISMUTH OXYCHLORIDE	Merck	2.000
<b>EMULIUM® ILLUSTR0</b>		POLYGLYCERYL-6 POLYHYDROXYSTEARATE, POLYGLYCERYL-6 POLYRICINOLEATE	Gattefossé	<b>0.100</b>
B	DEMINERALIZED WATER	WATER	-	42.352
	MAGNESIUM SULFATE 7H2O, CODEX	MAGNESIUM SULFATE	Merck	0.750
	SODIUM CHLORIDE, CODEX	SODIUM CHLORIDE	-	0.750
C	CETIOL® ULTIMATE	UNDECANE, TRIDECANE	BASF	3.000
	LEXFEEL WOW-A-DT	HEPTYL UNDECYLENATE, C13-15 ALKANE	Inolex	6.000
	SILICA BEADS SB-300	SILICA	Miyoshi	1.500
	SILICA BEADS SBNP-810	SILICA	Miyoshi	2.250
	SOFTOUCH CC6058	BORON NITRIDE	Momentive	1.750
D	PERFUME PRECIEUSE NEW 1510985	PARFUM	Expressions Parfumées	0.150
				100.000

## Operating instructions

- Heat A1 to 50°C and homogenize under stirring (1000 rpm) for 5 min.
- Prepare A2: heat Lexfeel Natural and Emulium® Illustro to 60°C and add slowly pigments under stirring, then stir for 10 min. Then use a three roll mill to smooth the dispersion. Add to A1 and homogenize with ultra-turrax for 2 min (10 000 rpm).
- Prepare B: heat water to 50°C and add salts under stirring. Mix until complete solubilization.
- Add B (50°C) to A (50°C) under mixing and homogenize for 10 min at 1500 rpm.
- Cool to 40°C under moderate mixing.
- Prepare C and homogenize with ultra-turrax at 10 000 rpm for 2 min.
- Add C under mixing.
- Then cool under moderate mixing to 27°C and add D, mix for a few minutes.

## Silky Touch Foundation


2073-3.14



+ Fluid foundation

+ Soft touch

+ Even complexion

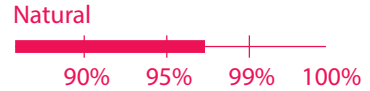

### Description

This fluid foundation perfectly melts into the skin to blur imperfections, even out skin tone and bring light. Emulium® Illustro provides a soft and silky texture, while Acticire® brings comfort to the skin. Emulium® Illustro is also used to wet pigments and improve their dispersion into the formula.

### Specifications

+ Aspect:  
Tinted fluid emulsion

+ Viscosity Brookfield RV (spindle A, speed 5):  
approx. 6000 mPa.s after 24h

### Ingredients

- **Emulium® Illustro**, used at 3%, creates a fluid W/O emulsion. It allows a soft and comfortable texture, and a luminous finish on the skin. It is also used for its pigment dispersing properties.
- Lexfeel N5, Lexfeel Natural and Cetiol® Ultimate are emollients which improve spreadability and bring a soft feel without any greasy sensation.
- **Acticire® MB** improves sensorial properties by bringing moisturization and comfort to the skin.
- Bentone Gel NGD V is a suspending agent, and Sodium Chloride and Magnesium Sulfate are salts which bring stability to the emulsion.
- Silica beads SB-300, SBNP-810 and Softouch CC6058 are feeling agents which bring a silky sensation.